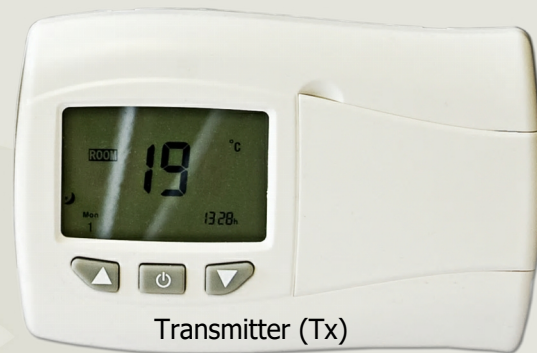
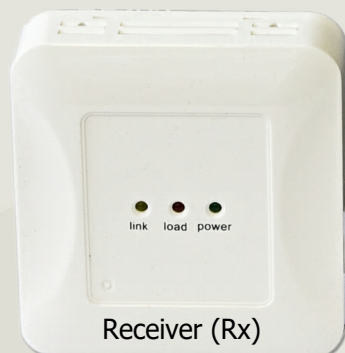





PRODUCT DATA SHEET

 


DUOSTAT RF205 COMMS PAIRING

 
 

 
Supply receiver with 230V mains power Ensure you have good batteries in transmitter
If transmitter display is active press  to enter "Power-off Status"

Note: Disconnect the power supply of receiver for at least 10 seconds.

Perform steps 1 to 3 below and pause at step 4.

Re-connect the power supply of the receiver and within **10 seconds** press "confirm"  button (step 4). You will find "AA" appears shortly after. The transmitter and receiver are now paired.

Configuration Setting:

- 1, Enter into Configuration Setting by pressing  briefly during Power-off Status.
- 2, Press  sequentially until configuration step 4.
- 3, Hold Transmitter next to receiver.
- 4, Press Return Button. 
- 5, "00" in the display will change to AA to confirm the code has been configured.
- 6, Press  to return to normal operation.



OPTIMUM

DUOSTAT COMMS PAIRING



Cert No: RS 30178
QR057

TFC GROUP LLP, TOWER HOUSE, VALE RISE, TONBRIDGE, KENT TN9 1TB

Tel: 01732 351680 Fax: 01732 354445 www.tfc-group.co.uk

Prepared for TFC Group LLP By: M. Edmonston

Issue 1: July 2018

Page 1 of 1