


TOWERSTAT RF AND RF/BM

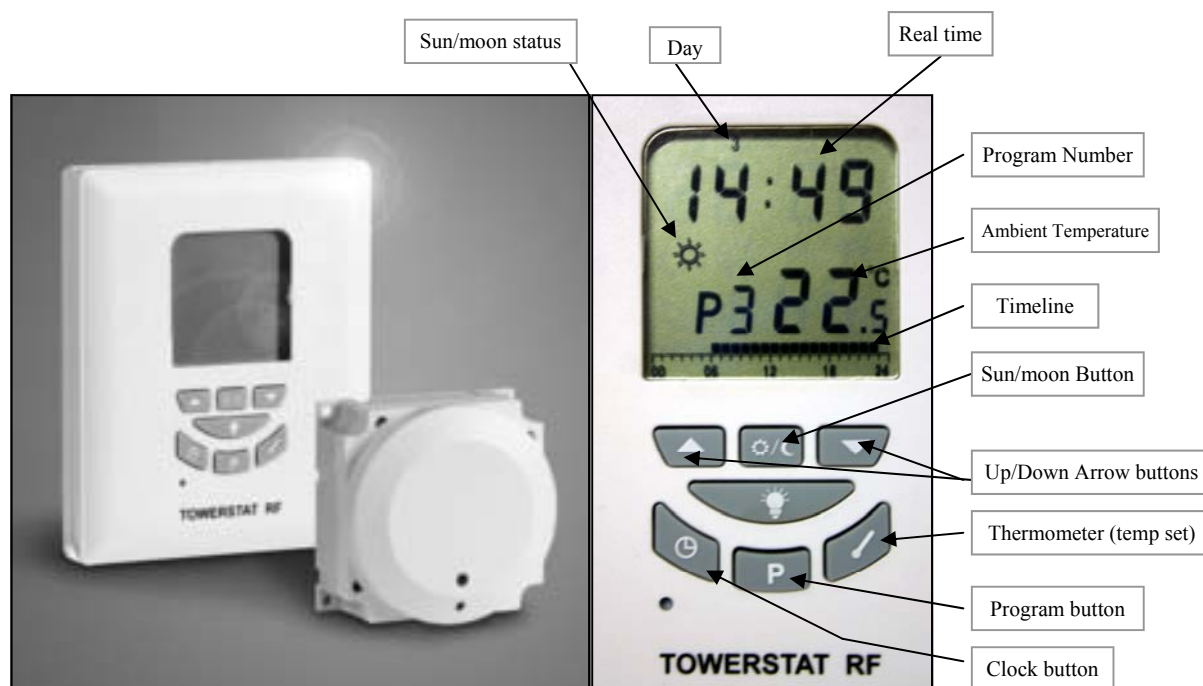

Example Program:

For this example we are going to set a program with on times of 6am to 9am and then to come back on at 4pm to 11pm. We will set the on temperature to 21°C and the off temperature to 7°C (frost protect)

Programming:

P1 to P6 are factory pre-set programmes which **you cannot alter**. Use one or more of these if they are suitable.

#P7, P8 & P9 are 'user-settable' programme positions. If you want to set your own programme follow these instructions:

Press **P** button

Select day (or days) by pressing **up arrow** button repeatedly until your day selection is visible. To program all seven days press the **up arrow** several times until you see all seven day numbers flashing together in the display.

Press **P** button

Press **up arrow** button to scroll to **P7** (or **P8**, or **P9**)

Press **P** button (first 1 hour bar flashes)

Press the **Sun/moon** button 6 times (you will see the hour number change to 6)

Press the **up arrow** 3 times (you will see the hour number change to 9)

Press the **sun/moon** button 7 times (you will see the hour number change to 16)

Press the **up arrow** 7 times (you will see the hour number change to 23)

Press the **sun/moon** button 1 time (you will see the hour number change to 0)

Press **P** button

The programmer is now set to come on at 6am to 9am and 4pm to 11pm.

We now need to set the on (sun) / off (moon) temperatures.

Press the **thermometer** button (bottom right)

Note: to toggle between sun and moon temperatures, press the **sun/moon** key.

Set the sun temperature to 21°C using the **up** or **down** arrow button.

Set the moon temperature to 7°C using the **up** or **down** arrow button

Press the **thermometer** button or wait 10 seconds to return to default screen.

The programmer is now set to come on at 6am to 9am and 4pm to 11pm and hold the room temperature at 21°C during those times. At all other times (off) the temperature will be held at 7°C. Please note that if the ambient room temperature falls below 7°C when in the off state, the boiler will fire and the heating will maintain the room temperature at 7°C