

Towerstat RF settings for manual on/off use.

Setting the clock

- 1, Press Reset
- 2, Press clock button
- 3, set the day using the up or down arrow buttons (1 = Monday)
- 4, Press clock button
- 5, Set hours using the up or down arrow buttons
- 6, Press clock button
- 7, Set the minutes with the up or down arrow buttons
- 8, Press the clock button

Set the Towerstat to permanent off (can be switch on/off manually)

- 1, Press the P button
- 2, Press the up arrow several times until all of the day numbers flash in the display (1234567)
- 3, Press P button
- 4, Select P2 using the up or down arrow buttons
- 5, Press the P button

The heating can be turned on/off by pressing the Sun/Moon button.

Setting temperature levels

- 1, Press the temperature set button (thermometer symbol)
- 2, Set Moon (off) temperature to 7 degrees using the down arrow button
- 3, Press the sun/moon button
- 4, Set the sun temperature to a comfort level (example: 21 degrees)
- 5, Press the sun/moon button