

## OP-IHTDIGI - OP-SBDIGI - OP-TS371.1 : RANDOM FUNCTION

The micro-processor of these digital timers incorporates a selectable RANDOM function. When RANDOM function is enabled, the existing programmed switching events will take place, with a randomised delay of up to 30 minutes.

### To select RANDOM function:

*(words in brackets are 'soft' functions of the Y or N buttons, denoted by the text in the display above the button).*

Press Y (setup) - PROG flashes

Press + or – to scroll to RANDOM - RANDOM flashes

Press Y (affirm) - RANDOM now selected

Press Y (affirm) or wait 10 sec for timeout to normal screen

RANDOM function is now selected: switching events programmed in the memory will occur with a randomised delay of up to 30 minutes.

### To de-select RANDOM function:

If RANDOM is visible in the display, RANDOM function is active. To de-select:

Press Y (setup) - PROG flashes

Press + or – to scroll to RANDOM - RANDOM flashes

Press Y (affirm) - RANDOM stops flashing

Press + (select) - RANDOM now de-selected

Press Y (affirm) Returns to normal display screen