

OP-TOUCHRF TOUCH ROOM THERMOSTAT


EN Operating Manual



Transmitter



ERP Class I; 1% contribution to system energy efficiency

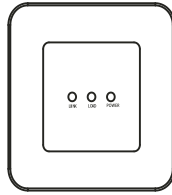

Receiver

Safety Instructions



Risk of electric shock!

Connection and mounting must be carried out by a professional electrician!

Note

- 1.The national regulations and safety instructions.
- 2.Interferences and changes to the device will invalidate the warranty and guarantee rights.
- 3.The device must only be used for the described purpose.

Read and observe these instructions to guarantee optimum function of the device and a safe operation.

Description of the Device

The OP-TOUCHRF room thermostat allows you a practical heat regulation, saves energy and the desired room temperature can be set easily.

- 1.Control of heating systems within a temperature range from +5 °C to +35 °C
- 2.Automatic frost protection
- 3.Touch screen wireless control via 433MHZ Radio frequency.

Designated Use

- 1.Wall surface mounted on or table top standing.
- 2.Suitable for use in dry rooms only!

Technical Data

Dimensions H × W × D(mm)

- Transmitter 83.5×111×29
- Receiver 86×90×20

Power supply

- Transmitter 2×1.5V LR06/AA
- Receiver 220VAC ± 10% II

Protection class

Switching capacity

- Ohmic load max. 6 A / 250 V AC/50 Hz
- Inductive load max. 2 A / 250 V AC/50 Hz

Switching output

Function mode

Heating

+5 °C

+5 °C ... +35 °C

+0 °C ... +50 °C


-5 °C ... +45 °C

±1 °C for +20 °C

0.5 °C

IP 30

Installation and Mounting Illustrations

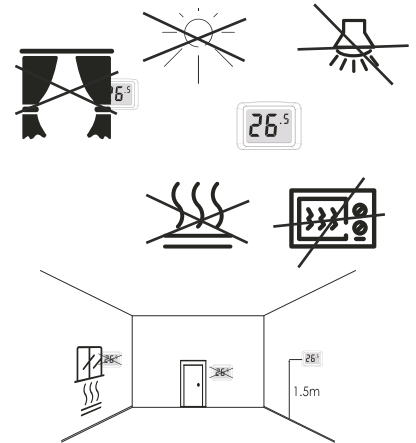

Receiver Installation


- 1.Open the receiver by springing the two plastic lugs accessible from the top of the back panel. Take care not to touch the PCB in case of static discharge.
- 2.Connect the wires according to the wiring diagram, and fit the back panel to the wall surface. Then mount the housing cover.

Transmitter Installation - Wall Mounting


- 3.Insert the batteries (1.5 V AA LR06) into the transmitter and re-fit the battery cover.
- 4.Fasten the wall backplate on the wall by means of the screws included in the delivery. See note i) overleaf
- 5.Re-assemble the thermostat to the backplate: place the slots at the top of the thermostat over the tabs on the backplate, then gently rotate the thermostat to engage with the tabs at the bottom.

Table Top Standing

- 6.Remove the transmitter backplate by inserting a flat-bladed screwdriver into the slots on the underside, and gently lever the backplate away from the transmitter. Locate the table-top stand moulding.
- 7.Push the table top stand upwards and take it out.
- 8.Place the table-top stand into the groove and push down to clip into place.

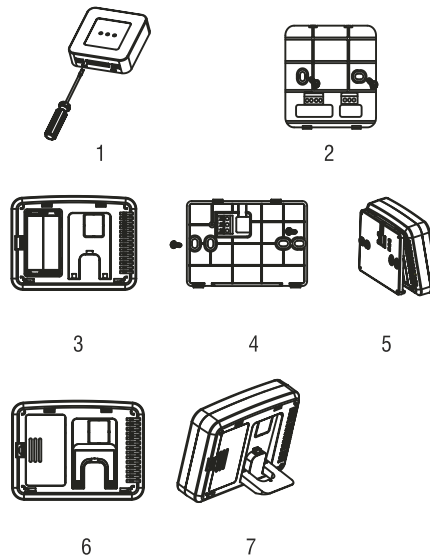

Receiver Wiring Diagram

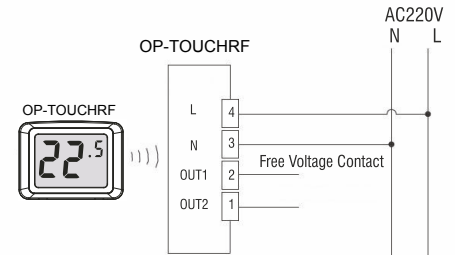

Connect wiring: 4 Live, 3 Neutral, 2 & 1 switched live(volt-free across 1 & 2) or for mains switching link 4 to 2, and take a 230V switched live from 1). Clip the top cover back on to the back panel. Take care not to touch the PCB in case of static damage.

Temperature Setting

The room temperature can be set by touching the display. See note ii) overleaf

1. Touch the display twice.

The background illumination of the display goes on and the temperature indication flashes.

2. Touch the left side of the display to reduce the temperature and the right side to increase the temperature. If you do not enter anything within 5 seconds, the set temperature is stored and the current temperature is shown again on the display.

Touch the display once in order to switch on the background illumination of the display for 5 seconds.

Battery Status Display

! If the batteries are empty, the symbol appears on the display.

If the battery change is carried out within a few minutes, the differential and the preset temperature remain stored.

Operating Modes

The room thermostat works continuously and regulates the set room temperature in the heating mode.

If the boiler is switched ON, the symbol appears in the display.

Configuration Setting


Enter into Configuration Setting by pressing and holding the right bottom corner (hidden SET button) for 5 seconds. Then press SET button sequentially to view and amend(if required) parameters noted below. 10 seconds after the last screen-touch input, the RF102 will exit configuration setting, and your changes will be stored.

Display Symbols	Options Properties	Remark
01 (at the left bottom corner)	Inside sensor temperature correction	Range: -9 to +9 °C Press left or right side of the display for adjustment.
02 (at the left bottom corner)	Temperature differential	Range: 1 - 5 °C Press left or right side of the display for adjustment.
00 or AA (in the corner)	Display IP address XXXX	To refresh the RF matching. Turn off power to the receiver for 10 seconds. Select 00 / AA configuration display. Switch on power to receiver, and within 10 seconds (Keep transmitter close to receiver), press the IP address shown at the left bottom corner for matching. 00: waiting for match. AA: matched already. The receiver's IP code (printed on the side of the receiver) is shown in the left bottom corner of the LCD.

Notes

- i) When installing on to a wall-box, a drilled blanking-plate will be required.
- ii) The touch screen area is smaller than the total LCD screen area. See the diagram. The device saves battery power by putting the touchscreen into a 'sleep' mode. To wake the device up, touch once, pause, then touch again.

Now touch left (minus) or right (plus) as required.

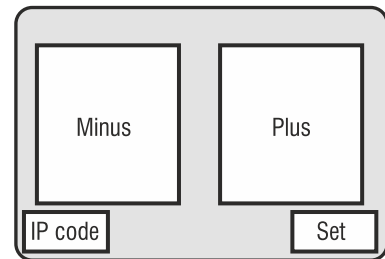

Touchscreen areas

The grey area is the LCD

What is a room thermostat?

... an explanation for householders

A room thermostat simply switches the heating system on and off as necessary. It works by sensing the air temperature, switching on the heating when the air temperature falls below the thermostat setting, and switching it off once this set temperature has been reached.

Turning a room thermostat to a higher setting will not make the room heat up any faster. How quickly the room heats up depends on the design of the heating system, for example, the size of boiler and radiators.

Neither does the setting affect how quickly the room cools down. Turning a room thermostat to a lower setting will result in the room being controlled at a lower temperature, and saves energy.

The heating system will not work if a time switch or programmer has switched it off.

The way to set and use your room thermostat is to find the lowest temperature setting that you are comfortable with, and then leave it alone to do its job. The best way to do this is to set the room thermostat to a low temperature – say 18 °C – and then turn it up by one degree each day until you are comfortable with the temperature. You won't have to adjust the thermostat further. Any adjustment above this setting will waste energy and cost you more money.

If your heating system is a boiler with radiators, there will usually be only one room thermostat to control the whole house. But you can have different temperatures in individual rooms by installing thermostatic radiator valves (TRVs) on individual radiators. If you don't have TRVs, you should choose a temperature that is reasonable for the whole house. If you do have TRVs, you can choose a slightly higher setting to make sure that even the coldest room is comfortable, then prevent any overheating in other rooms by adjusting the TRVs.

Room thermostats need a free flow of air to sense the temperature, so they must not be covered by curtains or blocked by furniture. Nearby electric fires, televisions, wall or table lamps may prevent the thermostat from working properly.